


## VPYRO DESCRIPTION

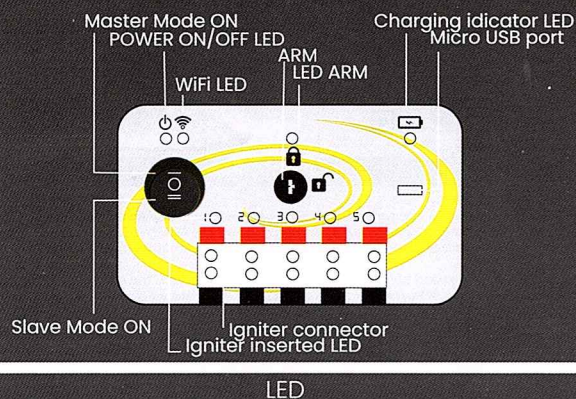

### LED

#### Power ON/OFF LED

- **Power on**  
Red LED steady ON
- **Low battery**  
Red LED flashing
- **Recharge battery**  
Red LED OFF

#### Arm LED

- **Armed device**  
Green LED steady ON
- **Unarmed device**  
Green LED OFF

#### WiFi LED - Master Mode

- **Device connected to the app**  
Blue LED steady ON
- **Device not connected**  
Blue LED flashing

#### Battery charge LED

- **Device in charge**  
Red LED steady ON
- **Full charge**  
Red LED OFF


#### LED WiFi - Slave Mode

- **Device connected Slave 1**  
White LED steady ON
- **Device connected Slave 2**  
Purple LED steady ON
- **Device connected Slave 3**  
Cyan LED steady ON
- **Device connected Slave 4**  
Yellow LED steady ON
- **Device connected Slave 5**  
Red LED steady ON
- **Dispositivo connesso Slave 6**  
Green LED steady ON

NOTE: Connecting more than 6 devices, the colour will follow the same order restarting from the white colour.


## MASTER MODE

### POWER ON

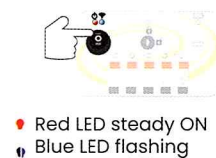

- Red LED steady ON
- Blue LED flashing

### POWER OFF

 

- LEDS OFF

## CONNECT YOUR SMARTPHONE

Setting → WiFi → VPyro\_VXXXXX

PW "1234VXXXXX"  
(Customizable with App)

 
- Blue LED flashing




## OPEN SECUREPYRO APP



- Blue LED steady ON




## INSERT THE IGNITERS

 

- Red LED steady ON




### VPYRO ARM



Unlock the key  
Green LED steady ON


WARNING: NOW STEP AWAY WITH YOUR SMARTPHONE

### SLIDE TO UNLOCK



ARM button enable


### FIRE THE IGNITERS



Keep pressed ARM button and ignite each single output with FIRE button.  
Or ignite all outputs together activating FIRE ALL button from App setting menu.


## SLAVE MODE

### POWER ON

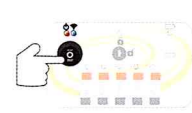

Red LED steady ON

### POWER OFF

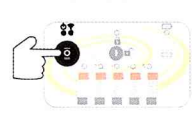


LEDS OFF

After turning ON the first MASTER unit, turn ON the second SLAVE unit.

NOTE: the WiFi passwords of the MASTER and SLAVE unit must be the same to let the unit create the MESH network.


### MESH NETWORK

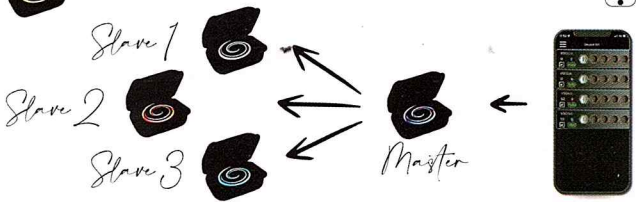

Select the desired unit in SecurePyro App to activate its own outputs.

### RESET PASSWORD (pw:1234VXXXXX)

1. Insert the ignitor in out 3
2. Arm the unit
3. Power ON the unit

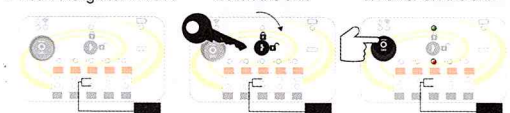

Green LED flashing  
Red LED flashing